

Mounting instructions

Installation instructions

Before installation and use check whether the identification number on the product or on the packaging matches the respective designation on the delivery note.

Operating temperature range: -30 °C to +80 °C

Operating total load (respective type): see table

WARNING



- Exceeding the temperature range can lead to a premature failure of the machine foot.
- Use only in the load range according to the table and do not exceed or fall below.
- Must not come into contact with harsh cleaning agents as well as petrol or benzene, as these can attack the neoprene elastomer insert.
- The neoprene elastomer insert must not come into contact with sharp objects, as it may become damaged as a result.

Mounting instructions

1. Raise machine and position machine feet (without threaded rod) in the centre below the supporting points of the machine. It must be ensured that the machine foot is stable on an even area.
2. The machine can be aligned by screwing the threaded rod into the machine foot.
3. When the machine is aligned, the supporting point of the machine is secured with the locknut and, if necessary, a washer. (see installation diagram)

Packaging disposal

Please dispose of the transportation packaging in an environmentally-friendly manner. Recycling packaging materials saves raw materials and reduces waste. The packaging materials do not contain any prohibited materials.

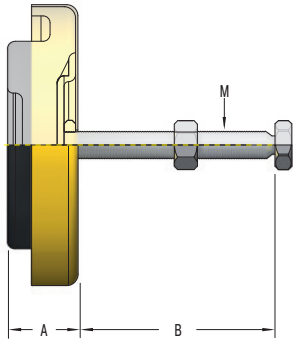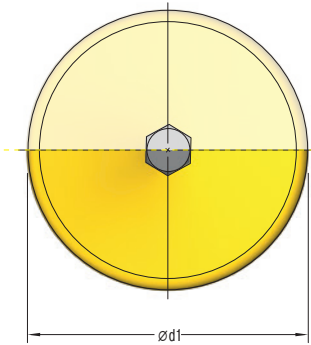

Performance and dimensions

TYPES	Load min. kg	Load max. kg	Natural frequency range Hz	M	A mm	B mm	Ød1 mm	Max. adjustment range mm
LEV-52221-M10	45	230	8 - 24	M10x1.5	38	80	80	8
LEV-52224-M12	135	450	8 - 24	M12x1.75	38	130	120	12
LEV-52226-M20	230	2,040	8 - 24	M20x2.5	41	130	160	12
LEV-52229-M24	1,815	5,900	8 - 24	M24x3.0	57	180	230	12

Regularly delivered with hexagon nut

Installation diagram

